


Operation Instruction

Blender
JPB-175B91

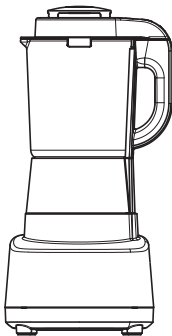

Please read this user manual carefully before using the product and keep it properly

Precautions for Safe Use



Warning:

Be alert to risks that may cause danger, serious injury, and significant property damage to personnel.

1. Before running the product, please confirm that the cup lid is rotated in place.
2. During product operation, it is strictly prohibited to open the cup lid.
3. Please be careful with the steam inlet and hot cup body to avoid burns.
4. Do not immerse the hot Glass blending jar in water.
5. When pouring hot liquid into the cup, be careful to the hot steam from the lid due to rapid evaporation.



Caution:

Be concerned about risks that may cause injury to people or damage to objects.

1. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.

Do not use it for other purposes.

2. This product is only suitable for use in areas below an altitude of 800 meters.
3. This product is a Class I electrical appliance. Before use, please ensure that the grounding wire is well grounded to avoid leakage accidents.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
5. The input voltage/frequency of this product is 220-240V/50Hz, please check whether it matches with the local voltage before connecting the power. Higher or lower than the voltage may affect the performance of the product or damage the electrical components, it is recommended to use a voltage regulator to ensure the normal use of the product.
6. This product is only intended for use with matching components such as the main body and cup body (including those configured by the product itself and

sold independently by our company). Do not use non matching components to avoid affecting product performance or causing accidents.

7. Please check whether the motor unit, cup and other parts are intact before use. If damage is found, please stop using and contact our customer service department in time. Please do not disassemble and repair by yourself to avoid affecting the performance of the product or causing accidents.
8. If the power cord is damaged, it must be replaced by the manufacturer, such as maintenance department or a similar professional in order to avoid danger.
9. Do not plug in or unplug the power plug with wet hands to avoid electric shock. When disconnecting the power supply, please hold the plug with your hand and pull it out. Do not pull on the power cord; Do not touch the power cord with sharp edges, corners, or other objects to avoid damage and leakage.
10. When using this product, please place it on a stable surface. Do not operate this product on inclined or unstable countertops, or on flammable materials such as carpets, towels, plastic, paper, etc. Please stay away from the edge of the countertop to avoid product tipping or accidents.
11. It is prohibited to use this product empty (without ingredients in the cup) or overloaded (with ingredients exceeding the rated value).
12. It is strictly prohibited to use the Glass blending jar body for dry grinding.
13. Before turning on the power, please make sure that the switch is off and the cup and other parts are installed in place to avoid the product not energized or cause personal injury.
14. Before replacing parts or contacting moving parts, the switch must be turned off and the power supply must be disconnected.
15. When the product is working, it is strictly prohibited to move the product, lift the cup or touch the blades, motor and other movable parts to avoid personal injury or damage to the product.
16. Before disassembling, assembling, adjusting or cleaning any parts of the product, please turn off the switch and disconnect the power supply to avoid leakage of electricity or accidental startup of the product.
17. During product operation, it is strictly prohibited to open the cup lid and add ingredients to avoid splashing and scalding. You can open the feeding cover in the middle of the cup lid and add ingredients through the ingredients lid
18. The continuous mixing time of this product shall not exceed 6 minutes (refer to the recipe instructions and display screen for the running time of each program), and the machine shall be stopped for 1 minute after each mixing; The above is one cycle. After working continuously for 3 cycles, the power must be disconnected and cooled for 15

minutes before resuming work to ensure the product's lifespan.

19. The continuous Heating time of this product should not exceed 60 minutes. If the power is cut off when making hot drinks, please replace the ingredients and make it again before reconnecting to avoid sticking.
20. If there is any liquid overflow during the working process of the product, please clean it up in time to avoid liquid overflow to the connector.
21. If the blade gets stuck, please turn off the switch and disconnect the power before cleaning to avoid injury accidents or damage to the product.
22. After the product processing is completed, it will emit 5 beeps as a warning sound. Please disconnect the power first, and then remove the cup body, cup cover and other components to avoid accidents.
23. If the product suddenly stops working when it is running, it may be the self-protection program triggered by overheating of the motor, please disconnect the power supply and cool it down for 20~30 minutes before using it.
24. This product is controlled by an intelligent chip, and intermittent fast and slow sounds during crushing are normal phenomena.
25. Clean the cup body and food-contact parts with water. When emptying and cleaning the cup, handle sharp blades with care to avoid cuts (protective gloves are recommended). Allow the Heating element to cool before cleaning after use.
26. It is strictly prohibited to rinse the handle and base coupler of the blender jar to prevent water from entering the Heating plate, damaging the product or causing accidents.
27. It is strictly prohibited for water to enter the handle and main coupler of the blender jar; if water does enter, ensure the parts are dried thoroughly before use.
28. Do not place any parts of this product in a dishwasher, microwave, sterilizer, or in water exceeding 60°C, nor use other equipment for Heating, as this may cause deformation or damage.
29. Do not place the product in high temperature, strong magnetism, flammable and explosive gases (such as natural gas, methane gas, etc.) and other environments, so as to avoid abnormal operation of parts or fire and other accidents.
30. Please turn off the switch and disconnect the power supply when not in use.
31. When disposing of the product and the product package, please hand them over to the relevant qualified department for recycling, and cut the power cord when disposing of them.
32. This product will produce a certain degree of mechanical noise when blending at high speed, We appreciate your understanding..
33. The product must be kept away from fire source for more than 30cm to avoid damage

to the product or fire hazard.

34. Large or elongated ingredients should be cut into pieces no larger than 3 cm on each side or segments no longer than 4 cm.
35. Glass blending jar are prone to breakage, please use with caution and handle with care; If any damage is found, please stop using immediately to avoid danger.
36. Please make sure to clean the ventilation holes on the cup lid or ingredients lid, and do not block them to avoid accidents such as splashing.
37. When handling the sharp cutting blades, emptying the container and during cleaning.
38. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
39. Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
40. Be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to sudden steaming.
41. Ensure that the blender is switched off before removing it from the stand.
42. The instructions shall include details on how to clean surfaces in contact with food.


Tips During Use:

Cleaning Instructions:

To clean surfaces that come into contact with food, use a damp cloth with mild detergent. Rinse and dry thoroughly before next use.

Product Component Name

● Product component names

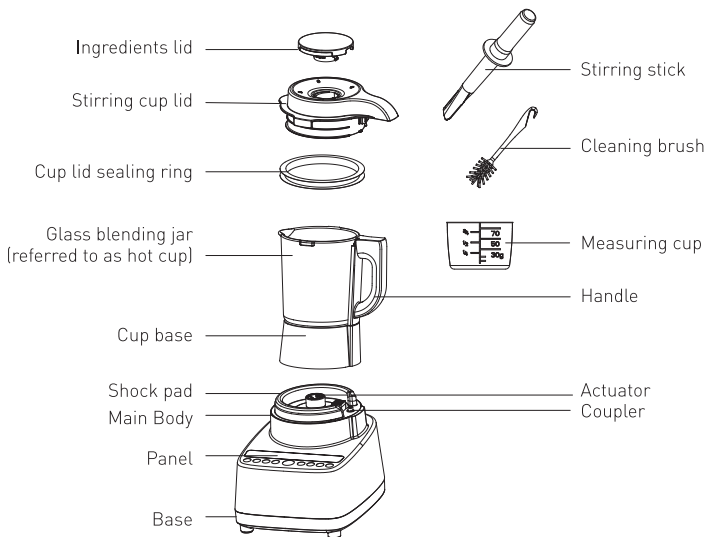


Note: Please refer to the actual product inside the packaging for product images!

● Common Ingredients 1 Measuring Cup Reference Table

Ingredients	Soybeans	Rice	Millet	Red beans	Mung beans
Weight (g)	80	90	100	80	90

Ingredients	Black Sesame Seeds	White Sesame Seeds	Oats	Peanuts	Cashews
Weight (g)	60	60	85	60	60

Using 1 level cup of soybeans as an example

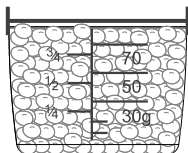


Note:

1. All data is provided by the Joyoung R&D Center and is subject to change without prior notice;
2. Due to significant differences in the shape, size, and variety of ingredients, the actual weight of the ingredients used shall prevail. The weight of the ingredients corresponding to the measuring cup above is for reference only.

Introduction to the Operating Interface and Functions

● Introduction to the operating interface

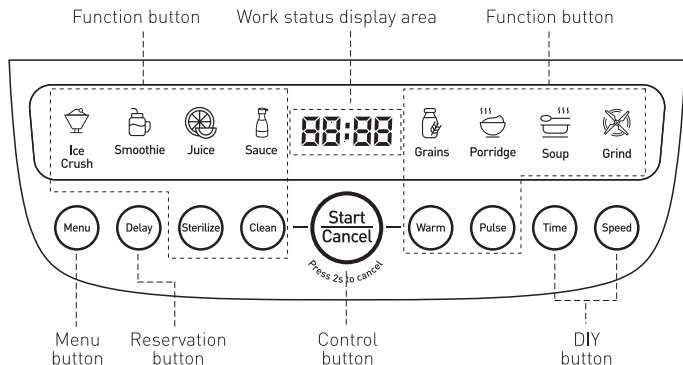

Note:

Apart from the Time and Speed adjustment function in the DIY button, the temperature, operating speed, and time in the function switching display area have been set to the ideal state and do not need to be adjusted

● Introduction to the working status display area



Display of speed level
when DIY "Time"

Displays the remaining
time of the current program
Delay: in hours
Other functions: in minutes

Display of the remaining
time of the current program
Delay: in minutes
Other functions: in seconds

● Introduction to the functions of each area

		Function Introduction		Remarks
Function switching display area	Mode	Ice Crush	Used to make various types of cold drinks with ice, such as mango smoothies 【Non-heating】	The total amount of ingredients and water should not exceed 1750mL Need to use a built-in stirring stick to assist in stirring.
		Smoothie	Used to make various milkshakes, such as strawberry milkshakes 【Non-heating】	The total amount of ingredients and water should not exceed 1750mL
		Juice	Used for making various fruit and vegetable juices 【Non-heating】	The total amount of ingredients and water should not exceed 1750mL
		Sauce	Used for making various sauces, such as peanut sauce 【Non-heating】	The recommended amount of ingredients should not exceed 400g. When the ingredients are not turned, a built-in mixing stick should be used to assist in stirring

		Function Introduction		Remarks
Function switching display area	Mode	Grains	It is used to make cereals soybean milk, original soybean milk, etc. 【Heating】	se dry beans to make soybean milk, and the ratio of food and water is about 1:13; Use wet beans to make soybean milk, and the ratio of food and water is about 1:9; The total amount of ingredients shall not exceed 1400mL.
		Porridge	It is used to make coarse grain Congee, such as coarse grain Congee, seafood Congee, etc. 【Heating】	Using rice to make Congee, the ratio of food and water is about 1:12; The total amount of ingredients shall not exceed 1400mL.
		Soup	Used for making various western style thick soup, etc 【Heating】	The total amount of ingredients shall not exceed 1400mL.
		Grind	Used for grinding powder (black pepper, almond powder) . 【Non-heating】	It needs to be used in conjunction with a multifunctional dry grinder cup, which needs to be purchased separately
	Sterilize		Used for rapid hot cleaning of the inner wall of the cup 【Heating】	The total amount of liquid should not exceed 1400mL (after operation, cleaning for twice is more effective)
	Clean		Used for rapid cleaning of the inner wall of the cup 【Non-heating】	The total amount of liquid should not exceed 1400mL (after operation, cleaning for twice is more effective)
	Warm		Automatic warm keeping: After the hot drink is made, the machine automatically enters warm keeping mode with a temperature of 70 °C and a maximum duration of 4 hours. Manual insulation: After the hot drink is made, remove the glass stirring cup and place it back on the base. You can manually press the warm keeping button, and the warm keeping temperature is preset at 55 °C, which cannot be manually adjusted.	
	Pulse		Used for stirring small amounts of ingredients.	Press and hold to stir, and stop running upon relieve.

	Function Introduction		Remarks
Delay button	Delay	Used to pre-set product operation time, with a reservation range of 1-24 hours. The displayed time is the completion time of the program, which needs to be used in conjunction with the hot drink function	Select the function with hot drink, Press the "timer" button, which is 12 hour by default. Each time you press the "timer" button, it will increase by 10min. Long press to do quick loop adjustment.
DIY button	Time	Used to set the stirring time.	The default time is 5s, with a maximum of 3 minutes and a minimum of 5 seconds. Press the Time button to adjust the time.
	Speed	Speed is used to set the mixing speed.	The default mixing speed is 5 stages, with stages 1-9 and H from low to high. 10 segments in total, long press to quickly adjust
Control button	Start/Cancel	Used to open selected functions or cancel running functions	If you need to stop during the work process, please long press the "Start/Cancel" button for 2 seconds.


Note:

1. The total amount of ingredients for each function of the Glass blending jar should not exceed the requirements of the manual and recipe;
2. Please refer to the recipe for specific ingredient ratios and combinations;
3. During the operation of the product, except for the "Start/Cancel" button, pressing other buttons without any response is a normal phenomenon;
4. After the Heating program is completed, the product will automatically enter the keep warm state, and the interface will display 8888, with a maximum warm keeping time of 4 hours;
5. Do not forget to install the cup lid sealing ring.

Usage Method

① Installation instructions for Glass blending jar

- Assemble the blender lid component;
- Install the cup lid onto the cup body and tighten it to assemble the hot cup mouldle;
- Install the hot cup component onto the main body.

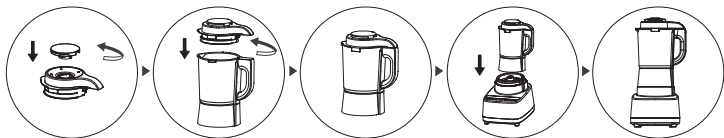

Before using the machine for the first time, customers located in areas above 800 meters in altitude or those experiencing overflow while making heated recipes should follow these steps to adjust for altitude:

- Add water to the stirring cup to 1400mL (do not add any other ingredients), put on the cup lid, and install it onto the main body;
- Connect the power supply and press the Start/Cancel button to enter standby mode, and long press the "Start/Cancel" button for 5 seconds to enter the altitude adaptation adjustment mode of the machine;
- After the setting is completed, the display screen will loop and show " 8888 ", while the machine will heat the water to boiling;
- When the display screen shows " 8888 " and beep beep sound is emitted, the altitude adaptive program is completed.

Note:

1. There is a large amount of steam during the boiling process, please pay attention to the heat;
2. After setting this function once, there is no need to repeat the setting when powered on again;
3. When the altitude of the machine changes significantly, please follow the above steps again to adjust the altitude.

Cleaning and Maintenance

- After using the product, please disconnect the power supply and clean the product in a timely manner.
 - Do not use steel wool, abrasive cleaners, or corrosive liquids (such as gasoline, acetone) to clean this product.
 - Wipe the exterior of the main unit and the blending jar with a damp cloth. Do not immerse or rinse the main unit and Heating cup in water or other liquids to avoid damaging the components or causing electrical leakage. (Refer to Figures 1, 2, and 3)
 - For the interior of the blending jar and food-contact parts, rinse with clean water (Refer to Figure 4), then dry immediately. Handle with care to avoid cuts (wear protective gloves if needed).
- Note: Sticking can be cleaned by yourself without affecting normal use.
- Cleaning: Add an appropriate amount of water to the cup body, install the jar lid, and install the jar body onto the main body; Connect the power, select the "Clean" function, and press the "Start/Cancel" button to start automatic cleaning; After cleaning, disconnect the power, remove the cup body, open the cup lid to pour out the water, and dry or air dry the cup body.
- Note: When handling greasy foods like meat, it is recommended to use a dishwasher and dishwashing detergent for manual cleaning. When using the "Clean" function, do not add detergent or other easily foaming cleaning products to the cup body to avoid overflowing and damaging the machine.
- When storing the product, ensure it is clean and dry, and place it in a dry, ventilated area away from direct sunlight.

Warning: Do not immerse the product in water or rinse it directly



Figure 1



Figure 2



Figure 3

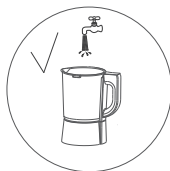


Figure 4


Fault Analysis and Troubleshooting

Fault phenomenon	Cause analysis	Troubleshooting
The indicator light is not on	1. The power cord is not properly plugged in 2. The blending jar and the main body are not assembled properly 3. The cup lid is not installed properly	1. Check the power cord and ensure it is plugged in properly 2. Ensure that the mixing cup body is well coordinated with the main body 3. Tighten the cup lid again
The indicator light is on and the product is not working	Product malfunction	Send it to the local after-sales service department for repair
Heating does not stop	Product malfunction	Send it to the local after-sales service department for repair
Overflow	1. Inappropriate selection of function buttons 2. Add too much or too little ingredients and water 3. Product malfunction 4. Not adapted to the current altitude	1. Select the corresponding menu according to the recipe or instruction manual 2. Operate according to the recipe or instruction manual 3. Send it to the local after-sales service department for repair 4. Run altitude adaption program
Sticky	1. The cup is not cleaned thoroughly 2. Adding too many ingredients 3. Inappropriate selection of function buttons	1. Clean the mixing cup thoroughly 2. Operate according to the recipe 3. Select the corresponding menu according to the recipe or instruction manual
Processing time is too long	Voltage too low	Using a voltage regulator
"E03 "" E04 "alarm	Abnormal voltage	Using a voltage regulator

Fault phenomenon	Cause analysis	Troubleshooting
"E19" alarm	The temperature inside the cup exceeds 85°C	Executing the Heating recipe at this time may cause boiling and splashing. The temperature of the ingredients and water in the cup is high. Please replace them with normal temperature ingredients or add cold water before restarting the program.
"E01" "E05" "E06" "E13" alarm	Product malfunction	Unplug the power and wait for 1 minute, then reconnect and restart. If the issue persists, please send the product to a local after-sales service center for repair.

- If the problem cannot be solved, do not disassemble the machine without authorization. Please send it to the local after-sales service department for repair.
- If the above content does not match the actual product due to changes in model or components, please refer to the actual product without further notice. Thank you for your understanding!

Electrical Schematic Diagram

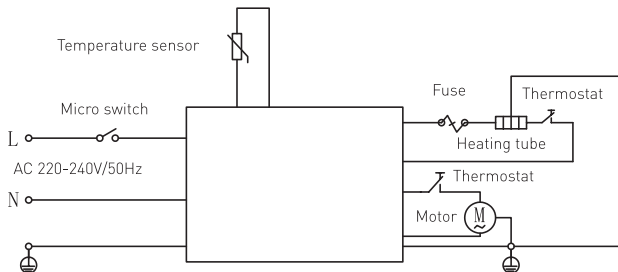

The Recipe

Explanation

1. This recipe is a recommended and commonly used recipe. Please be sure to add ingredients according to the recipe amount. If you need to make your own recipe, you can refer to the recommended recipe for pairing and ingredient amount. Do not overdo it to avoid overflow.
2. This recipe is a recommended and commonly used recipe for reference only. Due to differences in the variety and characteristics of the ingredients used, variations in the production effect are normal

Name	Ingredients and methods
Mango Smoothie	Ingredients: 200g mango, 100g original yogurt, 3g lemon juice, 125g ice cubes Method: Peel the mango, cut it into pieces and freeze it; Put all ingredients into the glass stirring cup; Add ice cubes, touch the "Menu" button, select the "Ice Crush" function, then touch the "Start/Cancel" button, and wait for completion; Note: If using ice cubes alone to make smoothies, please use the DIY function, select the H gear, and set the time to 20 seconds, Add 250g of ice cubes;
Pineapple Banana Milk Shake	Ingredients: 200g pineapple, 100g banana, 200g milk Method: Cut pineapple and banana into small pieces and freeze them; Put all ingredients into the glass stirring cup; Touch the "Menu" button, select the "Smoothie" function, then touch the "Start/Cancel" button, and wait for completion
Strawberry Smoothie	Ingredients: 400g strawberries, 90g milk, 15g honey Method: Cut the strawberries in pairs and freeze them; Put all ingredients into the glass stirring cup; Touch the "Menu" button, select the "Smoothie" function, then touch the "Start/Cancel" button, and wait for completion
Refreshing Vegetable and Fruit Juice	Ingredients: 60g vines, 75g celery, 1 kiwi fruit, 40g apples, 5g honey, 150mL drinking water Method: Cut the vines, celery, and apples into pieces; Peel and cut kiwifruit into pieces; Put all ingredients into the glass stirring cup, press the "Menu" button, select the "Juice" function, then press the "Start/Cancel" button, and wait for completion;

Name	Ingredients and methods
Kumquat Water Pear Pineapple Juice	Ingredients: 150g pineapple, 150g pear, 10mL kumquat juice, 10 ice cubes, 1 kumquat, 150mL drinking water Method: Peel and cut the pineapple and pear into pieces, and cut the kumquat in half; Put the main ingredients into the glass stirring cup; Knock the ice cubes into small pieces; Pour ice cubes, kumquats, and juice into a glass and place kumquats on top; Touch the "Menu" button, select the "Juice" function, then touch the "Start/Cancel" button, and wait for completion"
Peanut Butter	Ingredients: 400g ripe peanut kernels, 15g rock sugar, 40g oil (to be heated and cooled) Method: Add cooked peanuts and rock sugar into a glass stirring cup; Touch the "Menu" button, select the "Sauce" function, and then touch the "Start/Cancel" button. During the production process, use a push rod to stir and wait for completion"
Sesame Sauce	Ingredients: 400g white sesame seeds, 15g rock sugar, 15g oil (to be heated and cooled) Method: Spread white sesame seeds flat on a baking tray, with upper and lower tubes at a temperature of 150 °C, and bake for 20 minutes; Cool the roasted white sesame seeds to room temperature and place them in a glass stirring cup with rock sugar; Touch the "Menu" button, select the "Sauce" function, and then touch the "Start/Cancel" button. During the production process, use a stirring rod to stir and wait for completion
Germ Soybean Milk	Ingredients: 25g wheat germ, 25g soybeans, 600mL drinking water Method: Wash the soybeans and put all the ingredients into a glass stirring cup; Add drinking water; Touch the "Menu" key, select the "Grains" function, and then touch the "Start/Cancel" key to complete"
Purple Sweet Potato and Red Bean Soybean Milk	Ingredients: 30g red beans, 40g purple sweet potatoes, 600mL drinking water Method: Peel and cut the purple sweet potatoes into pieces, place them in a glass stirring cup, and add red beans; Add drinking water; Touch the "Menu" key, select the "Grains" function, and then touch the "Start/Cancel" key to complete
Health Preserving Cereals Sweet Congee	Ingredients: 50g purple rice, 30g red beans, 30g glutinous rice, 10g Job's tears, 10g seedless red dates, 10g brown sugar, 800mL drinking water Method: Place the processed ingredients into a glass stirring cup; Add drinking water; Touch the "Menu" key, select the "Porridge" function, and then touch the "Start/Cancel" key to complete;

Name	Ingredients and methods
Babao Mixed Grain Congee	Ingredients: 40g purple rice, 35g glutinous rice, 30g sorghum, 30g wheat kernels, 30g Job's tears, 30g red beans, 25g peanuts, 20g lotus seeds, 1000mL drinking water, 5g longan, 6 seedless red dates, 5g goji berries, moderate amount of rock sugar Method: Place the processed ingredients into a glass stirring cup; Add drinking water; Touch the "Menu" key, select the "Porridge" function, and then touch the "Start/Cancel" key to complete;
Cauliflower Soup	Ingredients: 100g cauliflower (excluding roots and stems), 50g onions, 50g potatoes, 100g milk, 250mL drinking water, appropriate amount of salt, appropriate amount of black pepper Method: Wash all ingredients thoroughly, cut cauliflower into small pieces, shred onions, and cut potatoes into pieces; Add cauliflower, onions, potatoes, milk, and drinking water into the glass stirring cup, cover it with a lid, and install the glass stirring cup; Touch the "Menu" key, select the "Soup" function, then touch the "Start/Cancel" button, wait for completion; pour out and add salt and black pepper, stir evenly;
Carrot Juice (DIY Recipe Example)	Ingredients: 400g Carrot Method: Peel and chop the carrots into 15x15x15 mm cubes, then add 600ml of cooled boiled water or purified water. Close the lid tightly. Press the "Menu" button, select "Speed," adjust to the "H" setting, then select "Time," set it to 2 minutes and 30 seconds, and press the "Start/Cancel" button. Wait for the process to finish.



Warning

Do not add ingredients in excess of the recommended amount. When users add too many ingredients, it can cause excessive load or even danger to this product. If the motor stops running for a long time or the production effect is abnormal during the work process, you can try unplugging the power, cooling for about 30 minutes, and adjusting the amount of ingredients to below the recommended value before trying again. If the situation cannot be improved, please contact customer service personnel in time to handle it for you.

Terms & Conditions of Warranty

1. Warranty Period:

This product comes with a two year manufacturer's warranty effective from the purchasing date on valid proof-of-purchase, original receipts or invoices or delivery date (if the delivery date is later than the purchasing date).

2. Warranty Coverage:

If the product has a manufacturing defect during the warranty period, you can contact Joyoung Malaysia after-sales service team or authorized distributor/retailer. Upon verification of the defect, you can apply for free Warranty Repair Service.

Note: Packing materials like boxes, interior foam, paper cards, user manual and other consumables parts are not covered under warranty.

3. Exclusion from warranty:

The warranty does not cover:

- Normal wear and tear.
- Use of the product in commercial usage.
- Alterations to the product spare part from non-authorized service centres.
- Damage caused by improper use, including mishandling or damage by third parties
- No warranty for accessories/consumable parts.

4. Paid Repair Services (within warranty period):

Free warranty repair service will not be applicable in any of the following situations, though paid repair services are available:

- Products purchased from unauthorized dealers or sellers.
- Product does not comply with Malaysia product standard, including differences in voltage and adapter compatibility.
- Damage caused by improper use, maintenance, and storage.
- Defects found after the warranty period has expired.
- Damage from unauthorized disassembly.
- Damage due to natural disaster, accidents, or even beyond our control (e.g. acts of God,

floods, accidents, governmental orders)

- Failure or damage due to misuse or abuse such as incorrect operation, liquid exposure, inappropriate voltage, or transportation damage.

5. Charges for Non-Warranty Repairs

- After receiving the defective product sent by the customer, Joyoung Malaysia service team will inspect the product to determine whether it is covered by the warranty.
- If the damage is due to misuse or is outside the warranty, you will be responsible for the repair fees, parts costs, and one-way shipping costs if you opt for repair services.
- If you choose to cancel the repair for non-warranty products, you will be responsible for both round-trip shipping costs.

Note: SC Alliances (M) Sdn Bhd reserves the right to reject any warranty claim if the appliance is used for commercial or semi-commercial purposes, or if the product does not comply with Malaysian product standards, including differences in voltage and adapter compatibility.

Contact us:

1. General inquiry: Please contact our customer service team: +6010-8801010.
2. Live Chat: Joyoung Malaysia (Shopee/Lazada)
3. Technical Support: Please contact our service centre at 03-8026 6226 (Highpoint Service Network Sdn Bhd)

Operation Hours: 9am-6pm (Mon-Fri)

Closed on Public Holiday

安全注意事项



警告

请警惕可能导致人员危险、重伤、重大财产损失的风险。

1. 产品运作前，请确认杯盖旋转到位。
2. 产品运作中，严禁打开杯盖。
3. 请小心蒸气口、热杯体，以免发生烫伤。
4. 请勿将玻璃破壁杯浸入水中。
5. 将热的液体倒入杯体时，由于水气会快速蒸发，应小心热蒸气从杯盖中喷出。



注意

请关注可能导致人员受伤或物品损害的风险。

1. 本产品仅适于家庭使用。

此电器仅适用于家庭和类似场合的使用，例如：

- 商店、办公室及其他工作环境中的员工厨房；
- 农舍；
- 酒店、汽车旅馆及其他住宿类场所供客户使用；
- 提供住宿加早餐服务的环境。

请勿作为其它用途。

2. 本产品仅限海拔800公尺以下地区使用。
3. 本产品为Ⅰ类电器，使用前请确保已连接接地线，以免发生漏电事故。
4. 本电器不适用于身体、感官或心智能力受限的人群（包括儿童），或者缺乏经验和知识的人，除非他们在负责其安全的人的指导下使用电器。应监督儿童，确保他们不嬉玩电器。
5. 本产品输入电压/频率为220-240V/50Hz，接通电源前，请检查是否与当地电压相符。高或低于该电压可能会影响产品性能或损坏电器元件，建议使用稳压器，以确保产品正常使用。
6. 本产品仅限于与配套的（包括产品本身配置的和本公司独立出售的）连接器、主体等部件一起使用，请勿使用非配套的部件，以免影响产品性能或发生事故。
7. 使用前请检查主体、杯体等部件是否完好。如发现损坏，请停止使用并及时与本公司客户服务部门联系。请勿自行拆卸修理，以免影响产品性能或发生事故。
8. 如果电源线损坏，为了避免危险，必须由制造商、其维修部或类似部门的专业人员

更换。

- 9.请勿用潮湿的手插、拔电源插头，以免触电。断开电源时，请用手握住插头拔出，请勿拉扯电源线；请勿将电源线碰到尖锐的棱边、尖角等物，以免损坏漏电。
- 10.使用本产品时，请将其置于平稳的台面上。请勿在倾斜、不稳定的台面上或在地毯、毛巾、塑料、纸等易燃物品上操作本产品，并请远离台面边缘，以免产品倾倒或发生事故。
- 11.禁止空转（杯中无食材）或过载（食材量超过最大刻度线）使用本产品。
- 12.严禁将玻璃破壁杯用于干磨。
- 13.接通电源前，请确认开关处于关闭状态，并且杯体及其他部件已安装到位，以免产品不通电或造成人身伤害。
- 14.在更换部件或接触运作部件前要关掉电源开关并断开电源。
- 15.产品工作时，严禁移动产品、提起杯体或触碰刀片、电机等可运作部件，以免造成人身伤害或损坏产品。
- 16.在拆、装、调校或清洗本产品的任何部件之前，请关闭开关、断开电源，以免产品漏电或突然启动。
- 17.产品运作时，严禁打开杯盖添加食材，以免发生喷溅烫伤。可打开杯盖中间的投料盖，通过投料孔添加食材。
- 18.本产品连续搅拌时间不得超过6分钟（各程序执行时间参考食谱说明及显示屏幕指示），每次搅拌后需停机1分钟；以上为一个周期，连续运作3个周期后，必须断开电源，冷却15分钟后再运作，以保证产品寿命。
- 19.本产品连续加热时间不得超过60分钟。如果在制作热饮时断电，重新通电前，请更换食材重新制作，以免造成粘底。
- 20.在产品工作过程中若有液体溢出，请即时清理，避免液体溢出至电源连接处。
- 21.如果刀片被卡住，请先关闭开关、断开电源，再进行清理，以免发生伤害事故或损坏产品。
- 22.产品运作完毕，发出5声“嘀”提示音，请先断开电源，再取下杯体、杯盖等部件，以免发生事故。
- 23.如果产品运行时突然停止工作，可能是电机过热产生的安全保护机制，请断开电源，冷却20~30分钟后方可使用。
- 24.本产品采用智慧芯片控制，粉碎时出现间歇性忽快忽慢的声音属正常现象。
- 25.杯体及与食品接触部件请用清水进行清洗。排空杯体和清洗部件时，请小心操作，务必注意锋利的刀刃，以免割伤（可佩戴保护手套）。热杯使用完毕后加热元件表面仍有余

热，请冷却后再进行清理。

- 26. 严禁冲洗热杯手柄及杯底耦合器，以免发热盘进水，损坏产品或发生事故。
- 27. 严禁热杯手柄及主体耦合器进水；如果进水，必须擦干或晾干后才能使用。
- 28. 请勿将本产品任何部件放入洗碗机、微波炉、消毒柜或超过60°C的热水中清洗或消毒，亦勿使用其他设备加热，以免部件变形或损坏。
- 29. 请勿将本产品置于高温、强磁、易燃易爆气体（如天然气、沼气等）等环境中，以免部件运作异常或发生事故。
- 30. 无人使用时请关闭开关、断开电源，以免产品发生短路。
- 31. 丢弃本产品 and 产品包装时，请交由当地环保回收单位回收，丢弃时请剪断电源线。
- 32. 本产品在高速搅拌时会产生一定程度的机械噪声，打扰之处，敬请谅解。
- 33. 产品必须远离火源30cm以上，以免损坏产品或发生火灾危险。
- 34. 体积大或者长条状的食材应分成单边不大于3cm的小块或长度不大于4cm的小段。
- 35. 玻璃破壁杯容易破裂，请小心使用、轻拿轻放；如发现破损，请立即停止使用，以免发生危险。
- 36. 杯盖或投料盖上的透气孔处请务必清洗干净，严禁堵塞，以免发生喷溅等事故。
- 37. 处理锋利刀片、清空容器及清洁时请小心。
- 38. 更换配件或接触运行中的活动部件前，请关闭电器并断开电源。
- 39. 当倒入热液体时请小心，因瞬间蒸汽可能会导致液体从电器中喷出。
- 40. 移除搅拌器前请确保其已关闭电源。
- 41. 说明书应包含清洁与食物接触的表面的详细方法。


使用提示：

清洁说明：

清洁与食物接触的表面时，请使用带有温和清洁剂的湿布。清洗后彻底擦干，以备下次使用。

产品部件名称

● 产品各部件名称

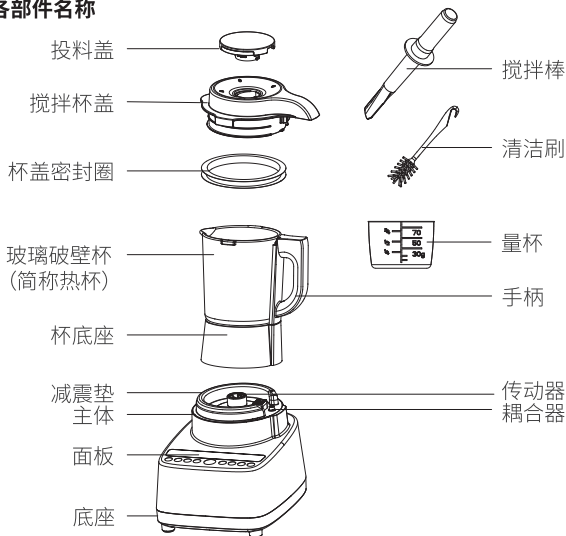


注：产品图片请以包装内实物为准！

● 常见食材1量杯参照表

食 材	黄豆	大米	小米	红豆	绿豆
克数 (g)	80	90	100	80	90

食 材	黑芝麻	白芝麻	燕麦	花生	腰果
克数 (g)	60	60	85	60	60

以黄豆为例的1平杯

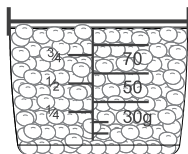


注：

1. 所有数据由九阳研发中心提供，若有变更恕不另行通知；
2. 由于食材的形状、大小、种类差异较大，实际的克重以使用的食材为准，以上量杯所对应的食材克重仅作参考。


操作界面及功能介绍

● 操作界面介绍

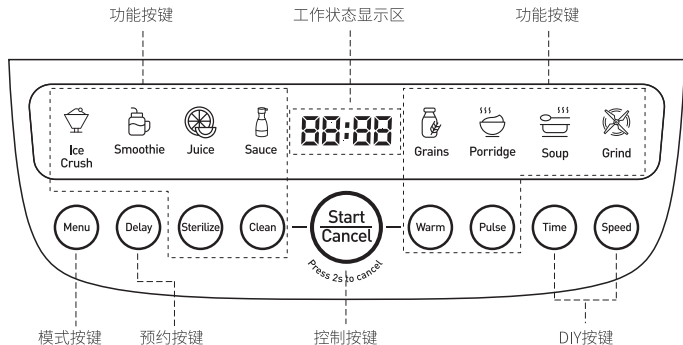

注：除DIY按键中的“调速”、“调时”功能外，功能按键的温度、运行速度和时间已设置成理想状态，不需要进行调节。

● 工作状态显示区介绍

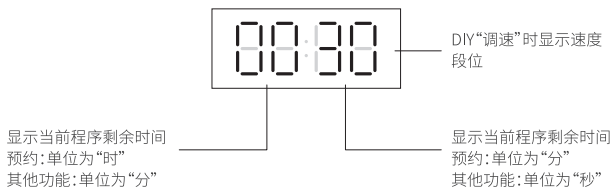

● 各区域功能介绍

		功能介绍		备注
功能切换显示区	模式	冰沙	用于制作各种冰沙,如芒果冰沙【非加热】	食材与水总量不超过1750mL 需使用自带搅拌棒辅助搅拌
		奶昔	用于制作各种奶昔,如草莓奶昔【非加热】	食材与水总量不超过1750mL
		果汁	用于制作各种果蔬汁【非加热】	食材与水总量不超过1750mL
		酱料	用于制作各种酱料,如花生酱【非加热】	食材料建议不超过400g。 食材不翻动时,需使用自带搅拌棒辅助搅拌
		五谷豆浆	用于制作五谷豆浆、原味豆浆等【加热】	干豆豆浆,食材与水的比例约1:13; 湿豆豆浆,食材与水的比例约1:9; 食材与水总量不超过1400mL
		杂粮粥	用于制作养生粥类,如杂粮粥、海鲜粥、小米粥等【加热】	大米粥,食材与水的比例约1:12; 食材与水总量不超过1400mL
		浓汤	用于制作各种西式浓汤等【加热】	食材与水总量不超过1400mL
		研磨	用于研磨粉末(黑胡椒、杏仁粉)【非加热】	需搭配多功能干磨杯使用,多功能干磨杯需单独购买
		热清洗	用于快速热清洗杯体内壁【加热】	液体总量不超过1400mL(工作后,循环两次效果更佳)
		轻松洗	用于快速清洗杯体内壁【非加热】	液体总量不超过1400mL(工作后,循环两次效果更佳)
		保温	自动保温:热饮制作完成后,机器自动进入保温模式,保温温度70℃,持续时间最长4小时。 手动保温:热饮制作完成后,拿开破壁杯,再放回底座,可手动触按保温按键,保温温度预设55℃,不可手动调节。	


功能介绍			备注
	瞬转	用于搅拌少量食材	按住即放动,离开即停止运转。
预约按键	预约	用于预先设置产品运作时间, 预约范围1~24小时。预约显示时间为食材制作完成时间, 需配合热饮功能使用。	选择可切换热饮功能, 按“预约”键, 默认为12小时, 每按一次“预约”键增加10分钟。长按可快速循环调节。
DIY按键	调时	用于设置搅拌时间	默认初始时间为5秒, 最大3分钟, 最小5秒, 触控调时按键进行时间调整。
	调速	用于设置搅拌速度	默认搅拌速度为5段, 段位从低到高依次为1~9段、H段。共10段, 长按可快速调节。
控制按键	启动/取消	用于启动已选择的功能或取消正在运行的功能。	若工作过程中需要停止, 请长按“启动/取消”键2秒。

- 玻璃破壁杯各功能食材总量请勿超过帮助书及食谱要求;
- 具体食材比例搭配请参照食谱;
- 产品工作过程中, 除“启动/取消”键外, 按其他按键无反应属正常现象;
- 加热程序完成后, 产品会自动进入保温状态, 界面显示 - b b -, 最长保温时间4小时;
- 请勿漏装杯盖密封圈;

产品使用方法

① 破壁杯安装帮助

- 组装破壁杯盖组件；
- 将杯盖组件安装到杯体组件上并旋紧，组成热杯组件；
- 将热杯组件安装到主机上。

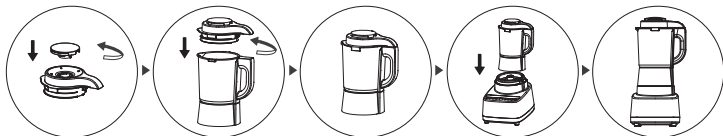

为保证食材制作效果，首次使用机器前，请海拔高于800米地区，或制作加热食谱出现溢出现象的顾客按以下步骤调整海拔适应：

- 破壁杯内加水至1.4L(请勿加入其他食材)，装好杯盖，安装到主机上；
- 接通电源短按启动/取消键进入待机模式后，再长按启动/取消键5秒，机器即进入海拔自动识别模式；
- 设置完成后，显示面板循环显示“8888”，同时机器将水加热至沸腾；
- 当显示面板显示“8888”后，同时发出蜂鸣声提醒，即表示海拔适应程序完成。

备注：

- 1.煮水过程中有较大的水蒸气，请注意防烫；
- 2.该功能设置一次后，再次通电无需重复设置；
- 3.当机器所处海拔变化较大时，请再次按上述操作，进行海拔适应调整。

清洁和保养

- 产品使用后，请实时断开电源并清洗产品。
- 请勿使用钢丝球、硬性清洁剂或腐蚀性液体（如汽油、丙酮）清洁本产品。
- 主体和杯体外部可用湿布擦拭。请勿将主体和热杯放在水或其他液体中喷淋、浸泡或冲洗，以免器件损坏或产品漏电。（如图一、图二、图三）
- 杯体内部及食品接触部件用清水冲洗（如图四），并实时擦干及晾干。请小心操作以免割伤（可佩戴保护手套）。

备注：发生黏底情况可自行清洁，不影响正常使用。

- 清洁:在杯体中加入适量清水,安装好杯盖,将杯体安装到主体上;接通电源,选择“清洗”功能,按下“启动/取消”键开始自动清洗,清洗完毕后,断开电源,取下杯体,打开杯盖将水倒出,将杯体擦干或晾干。

备注:若接触肉类等较油腻的食材,建议用洗碗布和洗洁精进行手工清洗。

使用“清洗”功能时,杯体中请勿加入洗洁精等易发泡洁净产品,以免溢出损伤机器。

- 收纳储存时,请确保产品清洁、干燥,并放置于干燥、通风、避免阳光直接照射处。




图一



图二



图三

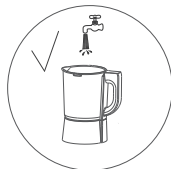

图四


故障分析及排除

故障现象	原因分析	故障排除
指示灯不亮	1.电源线未插好 2.杯体与主机没有装配好 3.杯盖没有安装确实	1.检查电源线并保证插好 2.保证破壁杯体与主机安装到位 3.重新旋紧杯盖
指示灯亮产品不工作	产品本身故障	送当地售后服务部维修
加热不停止	产品本身故障	送当地售后服务部维修
溢出	1.选择不适合功能 2.加入食材量和水量过多或过少 3.产品本身故障 4.程序海拔参数未适配	1.按食谱或帮助书选择对应的功能 2.按食谱配方或帮助书要求操作 3.送当地售后服务部维修 4.进行程序海拔适应调整
黏底	1.杯体内未清洗干净 2.加入食材过多 3.选择不适合功能	1.将破壁杯清洗干净 2.按食谱配方操作 3.按食谱或帮助书选择对应的功能
加工时间过长	电压过低	使用稳压器
“E03” “E04” 故障代码	电压异常	使用稳压器

故障现象	原因分析	故障排除
“E19” 故障代码	杯体内温度超过85℃	此时执行加热食谱, 可能导致沸腾喷溅。杯内食材和水温度较高, 请更换为常温食材或加冷水后, 重新启动工作
“E01” “E05” “E06” “E13” 故障代码	产品本身故障	拔下电源等待1分钟后, 重新通电启动一次, 若故障仍未排除, 请送当地售后服务部维修

- 如问题不能解决, 请勿私自拆卸机器, 请送当地售后服务部进行维修
- 以上内容如因型号或零部件变更与实物不符, 请以实物为准, 恕不另行通知敬请谅解!

电气原理图

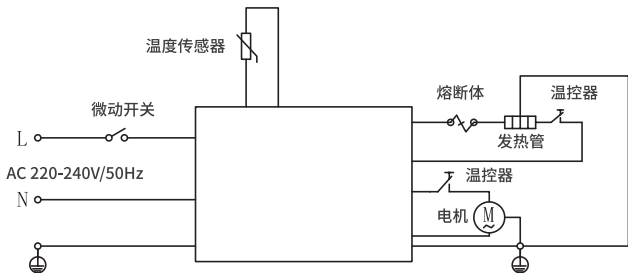

食谱

说明:1.本食谱为推荐的常用食谱,请务必按食谱量添加食材,如需自制搭配食谱,可参考推荐食谱的搭配和食材量,请勿过量,以免造成溢出。

2.本食谱为推荐的常用食谱,仅作为参考,因实际使用的食材品种及特点不同,制作效果有差异属于正常现象。

名称	食材和做法
芒果冰沙	食材: 芒果 200g, 原味优格 100g, 柠檬汁 3g, 冰块 125g 做法: 芒果去皮, 切块冷冻; 将所有食材放入进破壁杯中; 加入冰块, 触控“模式”键, 选中“沙冰”功能, 再触控“启动/取消”键, 待完成即可。 备注: 若单独用冰块打冰沙, 请使用DIY功能, 档位选择H档, 时间选择20s, 冰块加入250g;
凤梨香蕉奶昔	食材: 凤梨 200g, 香蕉 100g, 牛奶 200g 做法: 将凤梨、香蕉切丁冷冻; 将所有食材放入破壁杯中; 触控“模式”键, 选中“奶昔”功能, 再触控“启动/取消”键, 待完成即可;
草莓奶昔	食材: 草莓 400g, 牛奶 90g, 蜂蜜 15g 做法: 将草莓对切冷冻; 将所有食材放入破壁杯中; 触控“模式”键, 选中“奶昔”功能, 再触控“启动/取消”键, 待完成即可;
元气蔬果汁	食材: 萝蔓 60g, 芹菜 75g, 奇异果 1颗, 苹果 40g, 蜂蜜 5g, 饮用水150mL 做法: 将萝蔓、芹菜、苹果切块; 奇异果去皮切块; 将所有食材放入破壁杯触控“模式”键, 选中“果汁”功能, 再触控“启动/取消”键, 待完成即可;
金桔水梨凤梨汁	食材: 凤梨 150g, 水梨 150g, 金桔汁 10mL, 冰块 10颗, 金桔 1颗, 饮用水 150mL 做法: 将凤梨和水梨去皮切块, 金桔对半切; 将主食材放入破壁杯; 将冰块敲打成小碎冰; 将冰块、金桔与果汁倒入杯中摆上金桔; 触控“模式”键, 选中“果汁”功能, 再触控“启动/取消”键, 待完成即可;
花生酱	食材: 熟花生仁 400g, 冰糖 15g, 食用油(需加热放凉) 40g 做法: 将熟花生及冰糖加入破壁杯中; 触控“模式”键, 选中“酱料”功能, 再触控“启动/取消”键, 制作过程中使用推料棒搅拌, 待完成即可;
芝麻酱	食材: 白芝麻粒 400g, 冰糖 15g, 食用油(需加热放凉) 15g 做法: 将白芝麻平铺在烤盘上, 上下管温度150℃, 烘烤20分钟; 将烤好的白芝麻放凉至室温, 与冰糖一起放入破壁杯中; 触控“模式”键, 选中“酱料”功能, 再触控“启动/取消”键, 制作过程中使用搅拌棒搅拌, 待完成即可;
胚芽豆浆	食材: 小麦胚芽 25g, 黄豆 25g, 饮用水 600mL 做法: 黄豆洗净, 将全部食材放入破壁杯中; 加入饮用水; 触控“模式”键, 选中“五谷豆浆”功能, 再触控“启动/取消”键, 待完成即可;

名称	食材和做法
紫薯红豆豆浆	食材： 红豆 30g，紫薯 40g，饮用水 600mL 做法： 将紫薯去皮切块放入破壁杯中，加入红豆；加入饮用水；触按“模式”键，选中“五谷豆浆”功能，再触按“启动/取消”键，待完成即可；
养生杂粮甜粥	食材： 紫米 50g，红豆 30g，糯米 30g，薏仁 10g，无核红枣 10g，黑糖 10g，饮用水 800mL 做法： 将处理好的食材放入破壁杯中；加入饮用水；触按“模式”键，选中“杂粮粥”功能，再触按“启动/取消”键，待完成即可；
八宝杂粮粥	食材： 紫米 40g，糯米 35g，高粱米 30g，麦仁 30g，薏仁 30g，红豆 30g，花生 25g，莲子 20g，饮用水 1000mL，桂圆 5g，无核红枣 6颗，枸杞 5g，冰糖适量 做法： 将处理好的食材放入破壁杯中；加入饮用水；触按“模式”键，选中“杂粮粥”功能，再触按“启动/取消”键，待完成即可；
花椰菜浓汤	食材： 花椰菜 100g（去除根茎），洋葱 50g，马铃薯 50g，牛奶 100g，饮用水 250mL，食盐 适量，黑胡椒 适量 做法： 洗净所有食材，花椰菜切成小块，洋葱切丝，马铃薯切块；将花椰菜、洋葱、马铃薯、牛奶及饮用水加入破壁杯中，盖盖上盖，安装好破壁杯；触按“模式”键，选中“浓汤”功能，再触按“启动/取消”键，待完成即可；倒出加入盐、黑胡椒搅拌均匀即可；
胡萝卜汁 (DIY食谱示例)	食材： 胡萝卜400克 做法： 将胡萝卜去皮切块（15x15x15 mm），加入600毫升凉开水或纯净水，盖紧杯盖；按“功能”键，选择“调速”（“Speed”），调整到H档位，选择“时间”（“Time”），选择2分30秒，按“启动/取消”键，待完成即可。



警告

请勿添加超过建议值的食材量。当用户添加食材过多时，会对本产品造成过重负荷甚至产生危险。若出现工作过程中电机长时间停转、或制作效果异常时，可尝试拔掉电源，冷却30min左右并将食材量调整至建议值以下后重试，若情况无法改善，请及时联系客服人员为您处理。

保修条款

1. 保修期限：

本产品自购买之日起享有两年制造商保修，需提供有效的购买凭证、原始收据或发票。如交货日期晚于购买日期，则以交货日期为准。

2. 保修范围：

若产品在保修期内出现制造缺陷，用户可联系九阳马来西亚售后服务团队或授权经销商/零售商。经确认缺陷后，用户可申请免费保修维修服务。

注意：包装材料如外箱、内部泡沫、纸卡、用户手册及其他消耗品不在保修范围内。

3. 保修除外条款：

以下情况不在保修范围内：

- 正常使用造成的磨损。
- 产品用于商业用途。
- 由非授权服务中心更改或更换的零部件。
- 因不当使用、第三方操作或其他外部原因造成的损坏。
- 附件或消耗品不享有保修。

4. 保修期内的付费维修服务：

如果出现以下情况，即便在保修期内，用户仍需自费维修：

- 从非授权经销商或卖家处购买的产品。
- 产品不符合马来西亚产品标准，包括电压及适配器兼容性差异。
- 因不当使用、维护及存储导致的损坏。
- 保修期届满后发现的缺陷。
- 因未经授权的拆卸造成的损坏。
- 因自然灾害、事故或不可抗力（如天灾、洪水、事故、政府命令）造成的损坏。
- 因误用或滥用（如操作不当、液体渗入、使用不当电压或运输损坏）导致的故障或损坏。

5. 非保修维修费用：

- 九阳马来西亚服务团队在收到客户寄回的有缺陷产品后，会对产品进行检查，以

确定是否属于保修范围。

- 若检测结果显示损坏原因是用户误用或不在保修范围内，用户需承担维修费用、零部件费用及单程运费（若选择维修服务）。
- 如用户选择取消非保修产品的维修服务，需承担往返运输费用。

注意： SC Alliances (M) Sdn Bhd 保留拒绝任何因商业或半商业用途使用、或产品不符合马来西亚产品标准（包括电压和适配器兼容性差异）的保修申请的权利。

联系我们：

1.一般咨询：请联系客户服务团队：+6010-8801010。

2.在线咨询：Joyoung Malaysia（Shopee/Lazada）

3.技术咨询：请联系服务中心：03-8026 6226（Highpoint Service Network Sdn Bhd）

营业时间：周一至周五，上午9点至下午6点

公共假期休息