


Operating Instructions

Slow Juicer
JSJ-08S50

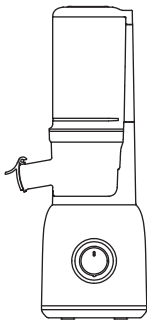


Please read this user manual carefully before using the product and keep it properly

Introduction


Dear User,

Thank you for choosing Joyoung Slow Juicer. This manual is specially designed for the JSJ-08S50 model. All the contents in this manual are for reference only during use and maintenance. For any matters not covered, please feel free to consult our Customer Service department. Rest assured that all food-conduct components of this product comply with relevant laws, regulations, and standard requirements.

Wish Joyoung products bring warmth, convenience, and health to your life.

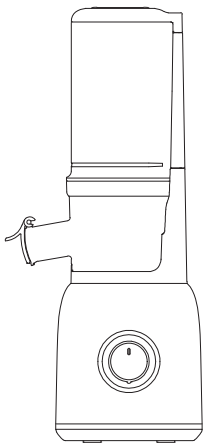

Parts names and functions

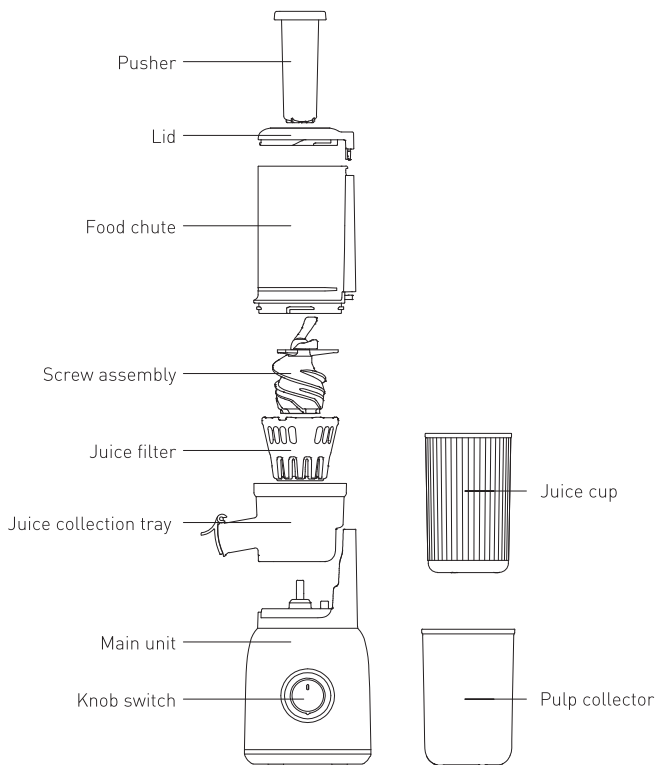


Note: Product images are based on the actual items inside the packaging.


Instructions for product use

Instructions


Before using the product for the first time, wash all parts that come into contact with ingredients.

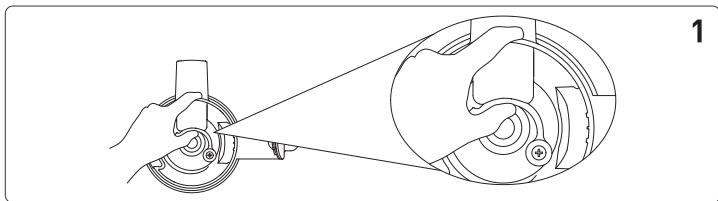

1. Before use, make sure to insert the orange silicone block at the bottom of the juice collection tray into the pulp collector, ensuring it is inserted to the position shown in the figure.

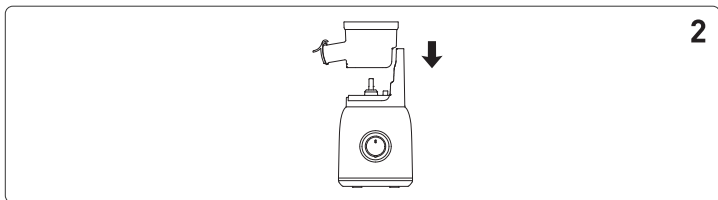


2. Install the juice collection tray to the main unit.

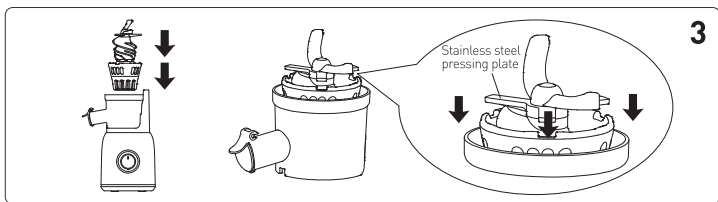

3. Install the juice filter to the juice collection tray, and then install the screw assembly to the juice filter.

Installation tip: When installing the screw assembly, align the pressing plate on the screw assembly with the grooves on the juice filter, press down the screw while slightly rotating (as shown above), until the pressing plate fits into the three grooves of the juice filter. If not properly, the whole machine will not assemble correctly!


4

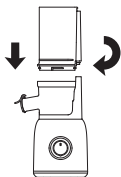

4. Attach the ingredient food chute onto the juice collection tray, and rotate it clockwise until it locks in place.


Note: Be sure to follow the "feed assembly first, then the lid" installation sequence, or the machine cannot be assembled.

5

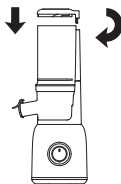

5. Attach the lid onto the ingredient food chute, and rotate it clockwise until you hear a "click", indicating that the lid is correctly installed and in place.

6

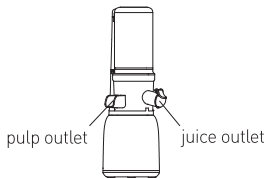

6. Place the product on a stable surface. Position a cup under the pulp and juice outlet. Then, turn the knob switch clockwise to the "ON" position to start.


7.This product offers two feeding methods:

Method 1:Remove the lid, cut the ingredients into chunks (large pieces are acceptable), and cut fibrous ingredients (like small celery) into segments (3-4cm or shorter). Place them into the food chute,reassemble the lid, and then start juicing.

Note: For safety during operation, removing the lid will stop the product, reassembly the lid will resume operation.

Method 2:After instaling the machine according to the above steps, cut the ingredients into small pieces and put them into the small mouth on the lid.

Operation Interface Instructions

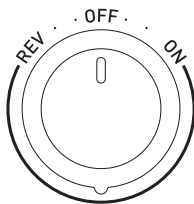

- **On:** Rotate the knob clockwise to the 'ON' position for normal juicing.
- **Off:** Rotate the knob towards the center to the 'OFF' position, to stop the product from operating.
- **Reverse:** Rotate the knob counter clockwise to the position marked 'REV' to handle ingredients or assist in disassembly and cleaning.

Attention:

- **Do not let the device run empty if no ingredients are added.**
- **Ensure the orange silicone plug at the bottom of the juice collection tray is properly inserted to prevent leakage at the pulp exit.**
- **During the juicing process, if the ingredients do not fall properly, you can use the included pusher to slowly press and move the ingredients side to side to assist in cutting; you can also reverse the machine for about 5 to 10 seconds, then switch to the "ON" to continue working.**
- **When juicing a small amount of ingredients, there may be little or no pulp, which is**


normal and does not affect use.

- When juicing, do not close the juice outlet cover for a long time, otherwise, the juice may backflow into the food chute.
- When mixing juicing, it is recommended to put soft ingredients (such as oranges) first, and then hard ingredients (such as carrots) for a better juice taste.
- When juicing high-hardness ingredients (such as carrots), please cut the carrots into pieces before feeding to avoid clogging.

8. After juicing is completed, please close the juice outlet cover before removing the juice cup to prevent a small amount of residual juice from dripping out.

Cleaning and maintenance


1. After use of the product, disconnect the power supply and clean the product in time.
2. Do not clean the product by using steel wool, abrasive cleaners, or corrosive liquids (such as gasoline, acetone).
3. The main unit can be wiped with a damp cloth. Do not rinse, soak, or spray the main unit with water or other liquids. Otherwise, it may result in damage to the device or electrical leakage from the product.
4. Steps for disassembling and cleaning parts in contact with food:

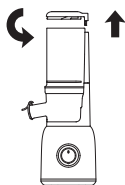

1. Hold the food chute and rotate the lid counterclockwise to remove it.


Note: When disassembling, please remove the lid first, then remove the ingredient container, otherwise the entire machine cannot be disassembled!

2

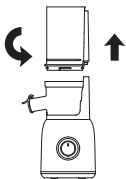


2. Hold the juice collection tray and rotate the food chute counterclockwise, and lift it upwards to remove the food chute.

3

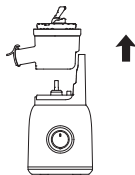

3. Hold the main unit of the product and pull upwards to remove the juice collector component.

4

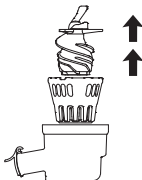

4. Hold the juice collector component and pull upwards to remove the screw assembly and juice filter.

Attention:

- Before disassembling, rotate to the "Reverse" position for 5-10 seconds to make disassembly easier.
- Rinse the juice collection tray, juice filter, screw assembly, food chute component, lid, and pusher with clean water.

- **When cleaning, pull out the orange silicone block at the bottom of the juice collection tray, rinse the pulp outlet with water, and install the silicone block properly (covering the pulp outlet).**
5. After cleaning, please dry the parts and store them properly.
 6. If you do not use the product for a long time, it is advised to keep the product clean and dry, and place it in a dry, ventilated place away from direct sunlight.

Safety precautions

⚠ Warning: Be alert to the risks that may lead to personal danger, serious injury, and significant property damage.

1. Do not plug or unplug the product with wet hands, or it might cause electric shock.
2. Do not rinse, soak, or spray the main unit with water or other liquids. Otherwise, it may result in damage to the device or electrical leakage from the product.
3. It is strictly forbidden to put hands, chopsticks, or other sharp objects into the feed inlet or juice outlet. Otherwise, it may result in damage to the inlet/outlet.
4. Do not disassemble, crush, damage, or short-circuit the product. Do not expose it to water, fire, or temperatures above 60°C to prevent accidents.
5. Do not process overheated ingredients ($\geq 60^{\circ}\text{C}$). Otherwise, it may result in damage to accessories or splashing scalding.

⚠ Note: Be aware of the risks that may result in injury to people or damage to products.

1. The product is not intended to be used by persons with physical, sensory, or mental impairments or lack of experience and knowledge of its use (including children), unless they are supervised or instructed by a person responsible for their safety in relation to the use of the appliance. Take care of the children and prevent them from playing with this product.
2. When using the product, place it on a stable surface. Avoid using it on slanted or

unstable surfaces or near flammable materials.

3. The product is for household use only and should not be used for other purposes.
4. The input voltage/frequency of the product is 220V-240V/50Hz-60Hz, check whether it is consistent with the local voltage before connecting the power supply. Voltages higher or lower than the value may affect the performance of the product or damage the electrical components. It is recommended to use a voltage regulator to ensure the normal use of the product.
5. The product is intended to be used with compatible main units, juicing assembly and other parts (including these supplied with the product and these sold independently by the company) only. Do not use non-compatible parts. Otherwise, it may affect the performance of the product or cause accidents.
6. Before use, please check whether the main unit, juice collection tray, juice filter, screw assembly, food chute, and other parts are in good condition, and stop using the product and contact the customer service department in time if any damage is identified. Do not disassemble or repair the appliance without authorization. Otherwise, it may affect the performance of the appliance or cause accidents.
7. If any damage or obvious cracks are identified in the main unit, juice collection tray, juice filter, screw assembly, and food chute before, during, and after use of the product, stop using it immediately. Otherwise, it may result in accidents.
8. To avoid danger, only the specialists from the manufacturer, its service department, or other similar departments are allowed to replace the damaged power cord.
9. When moving the product, hold the bottom of the product with both hands. Otherwise, it may result in accidents or damage to the product caused by falling off of the main unit.
10. The product running speed has been set to the ideal, which requires no further adjustment.
11. The product must be turned off and the power supply disconnected before replacing parts or touching moving parts.

12. When disconnecting the power supply, hold the plug with your hand and pull it out. Do not pull on the power cord; avoid letting the cord come into contact with sharp edges or corners to prevent damage or leakage.
13. Before connecting the power supply, make sure that the switch is turned off and the detachable parts are installed properly. Otherwise, it may result in failure to power on the product or cause accidents.
14. After the product is powered on, it is strictly forbidden to move the product or touch the screw assembly, motor, and other moving parts. Otherwise, it may result in accidents or damage to the product.
15. When the product is working, it is strictly forbidden to put the eyes close to the small opening on the cover. Otherwise, it may result in accidents.
16. Before disassembling, adjusting, or cleaning any part of this product, please turn off the device and disconnect it from the power supply to avoid leakage current or accidental start.
17. It is recommended to stop the product and allow it to rest after 10 minutes of continuous work. If the product needs to work continuously, it is required to cool it down for 15 minutes before resuming. If the product stops working during the restart, it is due to the temperature control protection of the product. Please unplug it and allow the appliance to cool down for more than 30 minutes before resuming.
18. After juicing some ingredients, the parts may be dyed or whitish, which is a normal phenomenon and does not affect the use.
19. After the processing is completed, turn off the switch, disconnect the power supply, wait the motor and screw assembly to stop rotating, and then remove the detachable parts and clean the product in time. Clean the parts in contact with food with clean water. When disassembling, cleaning, or washing detachable parts, operate with caution. Otherwise, it may result in injury (Wearing protective gloves is recommended).
20. Do not clean or disinfect any part of this product in a dishwasher, microwave oven,

sterilizer, or with hot water above 60°C, and do not heat them with other equipment, or the parts will be out of shape or damaged.

21. Do not leave the product in high temperature environment, strong magnetic field, and flammable and explosive gas (such as natural gas, methane) to prevent it from part failure or accidents like fire.
22. The product must be kept away from fire sources for more than 30 cm. Otherwise, it may result in damage to the product or fire hazard.
23. When the product is not in use, turn off the switch and disconnect the power supply. Otherwise, it may result in short circuit of the product.
24. To discard this product and its package, please have a qualified agent recycle them and cut the power cord.
25. Tips for the selection of ingredients
 - 1) Durian, jackfruit, avocado, and other fruits are not suitable for juicing alone due to their high content of protein and fat. They can be juiced with water-rich fruits such as pears.
 - 2) For ingredients with pits or hard seeds such as peach, plum, apricot, Chinese plum, mango, and persimmon, or ingredients with thick skin and hard shell such as oranges, citrus, and pomelo, please remove the pits, hard seeds, and thick skin before use. Otherwise, it may result in damage to the product.
 - 3) Since lemon contains strong acidic juice, it is recommended to juice it with other fruits and vegetables, and the volume of each juicing should not exceed 20 g (about 3 thin slices).
 - 4) Hard, high-fiber ingredients such as carrots, celery, ginger need to be cut into small pieces for juicing. Otherwise, it may affect the lifespan of the appliance. The pulp outlet can be manually cleaned during the juicing to improve the smoothness of pulp discharge.
 - 5) Leaf and stem ingredients (such as Chinese celery, wild cabbage) can be cut into 5–6 cm or shorter pieces for juicing. Otherwise, they may be wound on the

screw assembly due to their high-fiber content. In the process of juicing, the pulp outlet can be manually cleaned to improve the smoothness of pulp discharge.

6) Freshly juiced apple juice will oxidize and discolor, which is a normal phenomenon. You slow down the oxidation by adding a few drops of lemon juice.

7) For soft, fleshy ingredients (such as tomatoes, kiwifruit), it is recommended to juice them with hard, juicy ingredients (such as pears) due to their low production of juice; and soft ingredients should be juiced first, and then hard ingredients.

8) It is recommended to choose fresh fruits and vegetables, which are rich in juice.

9) Due to seasonal and regional differences in ingredients, the juice yield and taste may be slightly different.

10) The product is not suitable for juicing grain ingredients such as lotus seeds, beans, and peanuts.

11) It is forbidden to use the product to juice hard or high-fiber ingredients such as sugarcane.

Fault analysis and troubleshooting

Issues	Cause Analysis	Troubleshooting
The product does not work when powered on	The power cord plug is not inserted properly	Insert the power cord plug properly
	The lid or the food chute assembly is not installed properly	Install the lid and food chute properly
The juice contains a lot of pulp	The juice filter is damaged	Please take it to a local repair center for inspection
Abnormal vibration or loud noise	The juice filter is damaged	Please take it to a local repair center for inspection
	The motor is faulty	Please take it to a local repair center for inspection
The main unit leaks juice	The silicone plug of the juice collection tray assembly is not installed properly	Install the silicone plug properly
The food chute cannot be installed properly	The screw assembly is not installed properly	Install the screw assembly according to the operating instructions on the previous page
Ingredients are stuck in the food chute	The ingredients are too large	Cut the ingredients into pieces and then place them into the food chute
Long-fiber ingredients are tangled around the screw assembly	The fiber of the ingredients is too long and cannot be cut	Cut the ingredients into 3-4 cm or shorter segments before placing them in
The machine stops during use	The motor thermal protection causes the machine to stop after long-term use	Unplug and cool down for more than 30 minutes before working again
	The machine stops due to overload or blockage caused by too much or too hard ingredients	Reduce the amount of ingredients and avoid putting in ingredients that are too hard

- If the fault cannot be resolved, do not attempt to disassemble the machine yourself. Send it to the local after-sales service department for repair.
- If the above content is inconsistent with the actual product due to changes in models or parts, the information of the actual product shall prevail. Such changes may occur without prior notice, we apologize for any inconvenience caused!

Recipe

Recipe	Ingredients	Instruction
Watermelon Lemon Juice	Watermelon: about 1/6 piece (400g) Lemon: about 1/6 piece (10g) Mint leaves: 2 pieces (20g)	1. Peel and cut the watermelon and lemon into chunks, and wash the mint leaves for later use. 2. Set up the machine, turn the knob to "On", and first add the lemon chunks and mint leaves through the feeding chute, followed by the watermelon chunks. 3. Once juicing is complete, turn the knob to "off", and pour the juice into a glass to enjoy.
Carrot Apple Tomato Juice	Apple: about 1 piece (200g) Cherry tomatoes: about 5 piece (100g) Carrot: about 1/4 piece (50g)	1. Peel and core the apple, then cut it into chunks. Peel and cut the carrot into chunks, and wash the cherry tomatoes, removing the stems for later use. 2. Set up the machine, turn the knob to "On", and first add the cherry tomatoes for juicing, followed by the apple chunks and carrot chunks. 3. Once juicing is complete, turn the knob to "off", and pour the juice into a glass to enjoy.
Rich Soy Milk	Soybeans: 50g Water: 450g	1. Soak the soybeans for 6-8 hours in advance, then wash and set aside. 2. Set up the machine, turn the knob to "On", and alternately and slowly add the washed soybeans and water. 3. Once juicing is complete, turn the knob to "off" to stop the machine. 4. Pour the extracted soy milk into a pot and cook until boiling, stirring continuously, then simmer for another 10 minutes.

Recipe	Ingredients	Instruction
Grapefruit Peach Jasmine Fruit Tea	Grapefruit: about 1/2 piece(300g) Peach: about 1 piece(300g) Purified water: 100g Jasmine tea leaves: 4g	1.Remove the flesh from the grapefruit and peel and pit the peach, cutting it into chunks. In a cup, add the jasmine tea leaves and purified water, and let it steep for 10 minutes. 2.Set up the machine, turn the knob to "On", and first add the grapefruit flesh for juicing, followed by the peach chunks. 3.Once juicing is complete, turn the knob to "off", pour the juice into a cup, add the steeped tea, and stir well to enjoy.
Kiwi Kale Juice	Apple: about 1 piece(200g) Kiwi: about 1 piece(100g) Kale: about 1 leaf (10g)	1.Peel and core the apple, then cut it into chunks. Wash the kale and cut it into pieces, and peel and cut the kiwi into chunks for later use. 2.Set up the machine, turn the knob to "On", and first add the kale pieces and kiwi chunks for juicing, followed by the apple chunks. 3.Once juicing is complete, turn the knob to "off", and pour the juice into a glass to enjoy.
Mango Ice Cream	Frozen mango chunks: 500g	1.Peel and pit the mango, then cut it into chunks and freeze. Before making the ice cream, remove it from the freezer and let it thaw for 10 minutes. 2.Set up the machine, turn the knob to "On", and add the frozen mango chunks, the mixture come out from the dispensing outlet. 3.Once the process is complete, turn the knob to "off", and it's ready to enjoy!
Banana Yogurt Ice Cream	Frozen yogurt chunks: 200g Frozen bananas: 300g	1.Peel the bananas and cut them into pieces, then freeze them. Before making the ice cream, remove them from the freezer and let them thaw for 10 minutes. 2.Set up the machine, turn the knob to "On", and add the frozen yogurt chunks and banana pieces through the feeding chute, letting the mixture come out from the dispensing outlet. 3.Once the process is complete, turn the knob to "off", and it's ready to enjoy!

Warning: The main purpose of the slow juicer is juice extraction. To retain the product's lifespan, it is not recommended to long-term use the Joyoung slow juicer for extraction of frozen fruits or acidic ingredients, such as lemons.

Terms & Conditions of Warranty

1. Warranty Period:

This product comes with a two year manufacturer's warranty effective from the purchasing date on valid proof-of-purchase, original receipts or invoices or delivery date (if the delivery date is later than the purchasing date).

2. Warranty Coverage:

If the product has a manufacturing defect during the warranty period, you can contact Joyoung Malaysia after-sales service team or authorized distributor/retailer. Upon verification of the defect, you can apply for free Warranty Repair Service.

Note: Packing materials like boxes, interior foam, paper cards, user manual and other consumables parts are not covered under warranty.

3. Exclusion from warranty:

The warranty does not cover:

- Normal wear and tear.
- Use of the product in commercial usage.
- Alterations to the product spare part from non-authorized service centres.
- Damage caused by improper use, including mishandling or damage by third parties
- No warranty for accessories/consumable parts.

4. Paid Repair Services (within warranty period):

Free warranty repair service will not be applicable in any of the following situations, though paid repair services are available:

- Products purchased from unauthorized dealers or sellers.
- Product does not comply with Malaysia product standard, including differences in voltage and adapter compatibility.
- Damage caused by improper use, maintenance, and storage.

- Defects found after the warranty period has expired.
- Damage from unauthorized disassembly.
- Damage due to natural disaster, accidents, or ven beyond our control (e.g. acts of God, floods, accidents, governmental orders)
- Failure or damage due to misuse or abuse such as incorrect operation, liquid exposure, inappropriate voltage, or transportation damage.

5. Charges for Non-Warranty Repairs

- After receiving the defective product sent by the customer, Joyoung Malaysia service team will inspect the product to determine whether it is covered by the warranty.
- If the damage is due to misuse or is outside the warranty, you will be responsible for the repair fees, parts costs, and one-way shipping costs if you opt for repair services.
- If you choose to cancel the repair for non-warranty products, you will be responsible for both round-trip shipping costs.

Note: SC Alliances (M) Sdn Bhd reserves the right to reject any warranty claim if the appliance is used for commercial or semi-commercial purposes, or if the product does not comply with Malaysian product standards, including differences in voltage and adapter compatibility.

Contact us:

1. General inquiry: Please contact our customer service team: +6010-8801010.
 2. Live Chat: Joyoung Malaysia (Shopee/Lazada)
 3. Technical Support: Please contact our service centre at 03-8026 6226 (Highpoint Service Network Sdn Bhd)
- Operation Hours: 9am-6pm (Mon-Fri)
Closed on Public Holiday


前言

尊敬的用户:


感谢您使用九阳榨汁机(原汁机)。本说明书适用于JSJ-08S50产品,书中所有内容仅供用户使用和维护时参考,未尽事宜,欢迎向本公司的客户服务部门咨询。

本产品与食品接触配件均符合相应法律法规和标准要求,请放心使用。

愿九阳产品给您的生活带来温馨、便捷与健康。

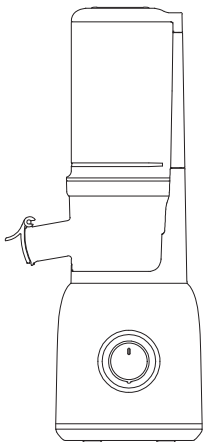

产品部件名称

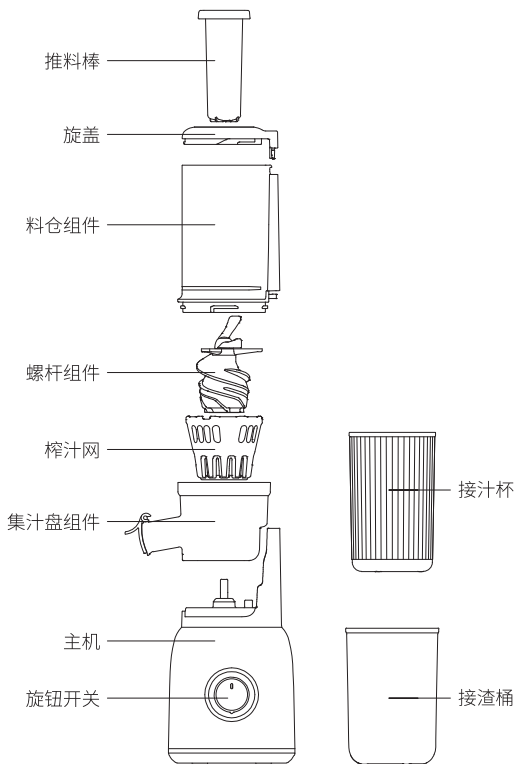


注：产品图片请以包装内实物为准！


使用方法

在初次使用本产品前, 请清洗与食材接触的各个部件。


操作指引

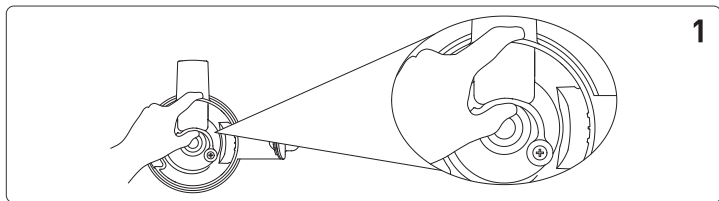

使用前请务必将集汁盘组件底部**橙色的硅胶塞块**塞紧至出渣口内, 需塞紧至图示位置。

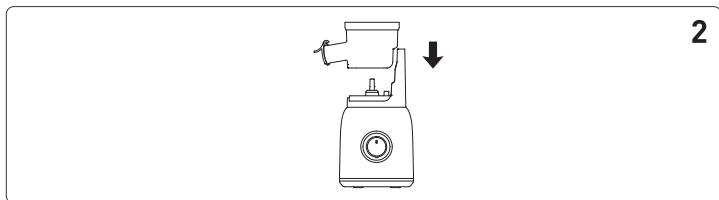


将集汁盘组件安装到主机上。

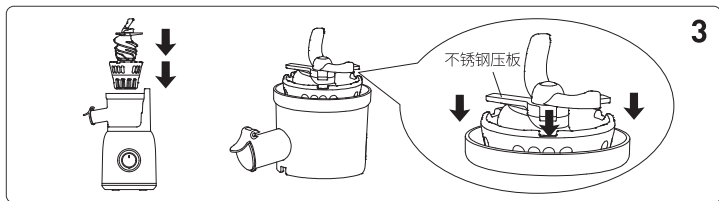

将榨汁网安装于集汁盘组件内, 然后将螺杆组件安装于榨汁网内。

安装技巧: 安装螺杆时, 先将螺杆上的**压板**对齐榨汁网的**凹槽**后保持, 下压螺杆的同时稍微转动 (如上图), 直到**压板**放入榨汁网的**3个凹槽**中。如未放入, 整机将无法完成组装!


4

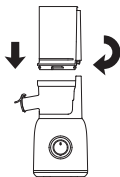

将料仓组件扣于集汁盘组件上, 顺时针旋转到底。


注意:请务必按照“先料仓后旋盖”的顺序安装, 否则整机无法完成组装!

5

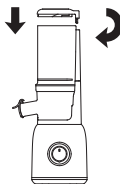

将旋盖扣于料仓组件上, 顺时针旋转至出现“咔哒”声, 表明旋盖正确安装并已安装到位。

6

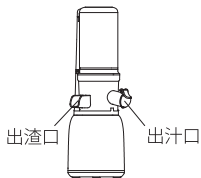

将产品放置在水平桌面上, 在出渣口与出汁口下方放置杯子, 再将旋钮开关旋至“榨汁”档位启动。


7.本产品有两种投料方式：

方式①：拆下旋盖，将食材切块(可大块)、纤维较多的食材(如小芹菜)切段(3~4cm或更短)投入料仓后，重新安装好旋盖，再启动榨汁。

注：为保障操作期间的安全性，取下旋盖，产品将停止工作，重新安装好旋盖后会继续工作。

方式②：按照以上步骤安装好机器后，将食材切小块，从旋盖上的小口投入。

操控界面说明

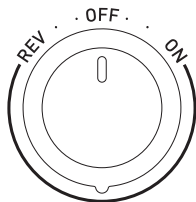

- **开：**顺时针旋转旋钮至“0”指向“开”档位，用于正常榨汁。
- **关：**向中间旋转旋钮至“0”指向“关”档位，产品停止工作。
- **反转：**逆时针旋转旋钮至“0”指向“反转”档位，可用于处理食材落料异常或辅助拆卸及清洗。


注意：

- 如果未投入食材，请不要让设备空转。
- 集汁盘组件底部橙色硅胶塞块需塞紧，若没塞紧，出渣口可能会有少许液体渗出。
- 榨汁过程中如遇食材无法下落时，可用配套的推料棒缓慢推压食材并左右拨动，辅助食材切削；也可反转机器约 5 ~ 10 秒，再旋至“榨汁”档位继续工作。
- 投入较少的食材时，可能会出现出渣少或无渣的情况，此为正常现象，不影响使用。
- 榨汁时，请勿长时间关闭出汁口盖，否则果汁可能会逆流至料仓。
- 混合榨汁时，建议先放软性食材（如橙子），再放硬性食材（如胡萝卜），果汁口感更佳。
- 榨取高硬度食材（如胡萝卜）时，请将胡萝卜切块后再进行投料，避免造成落料困难。

8.榨汁完成后，拿取接汁杯前请关闭出汁口盖，避免出汁口少量残余果汁滴出。


清洁及保养

1. 产品使用后, 请及时断开电源并清洗产品。
2. 请勿使用钢丝球、研磨性清洁剂或腐蚀性液体 (如汽油、丙酮) 清洗本产品。
3. 主机可用拧干的抹布擦拭; 请勿放在水或其他液体中冲洗、浸泡或喷淋, 以免器件损坏或产品漏电。
4. 与食品接触部件拆卸和清洗步骤:

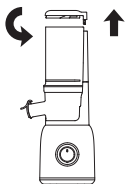


握住产品料仓组件部分, 逆时针旋转旋盖, 将旋盖拆下。

注意: 拆卸时, 请先拆下旋盖, 再拆下料仓, 否则整机无法拆卸!

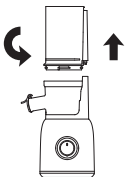


握住产品集汁盘组件部分, 逆时针旋转料仓组件, 同时向上提拉, 将料仓组件拆下。

3

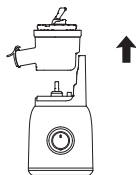

握住产品主机部分，向上拔出集汁盘组件。

4

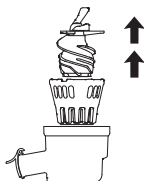

握住集汁盘组件，向上拔出螺杆组件和榨汁网。

注意：

- 拆卸前，旋至“反转”档位5~10秒，拆卸更容易。
- 需用清水冲洗集汁盘组件、榨汁网、螺杆组件、料仓组件、旋盖、推料棒。
- 清洗时，请拔出集汁盘组件底部橙色的硅胶塞块，再用水冲洗出渣口，冲洗完后需要将硅胶塞块安装到位(覆盖出渣口)。

5.清洗完毕后请将部件晾干再妥善收纳放置。

6.若长时间不使用本产品，请保持产品清洁、干燥，并放置于干燥、通风、避免阳光直接照射处。

安全注意事项

警告：对可能导致人员危险、重伤、重大财产损失的风险要警惕。

1. 请勿用湿手插、拔电源插头，以免触电。
2. 请勿将主机放在水或其他液体中冲洗、浸泡或喷淋，以免器件损坏或产品漏电。
3. 严禁将手、筷子或其他尖锐物伸入进料口或出汁口，以免发生伤害事故或损坏产品。
4. 严禁任意拆解、挤压、破坏和短路本产品，严禁将本产品投入水、火中或置于温度高于60°C的环境中，避免发生火灾等风险。
5. 请勿加工过热食材（≥60°C），以免造成配件损坏或喷溅烫伤。

注意：对可能导致人员受伤或物品损害的风险要关注。

1. 本产品不打算由存在肢体、感官或精神能力缺陷或缺少使用经验和知识的人（包括儿童）使用，除非有负责他们安全的人对他们进行与器具使用有关的监督或指导。应照看好儿童，确保他们不玩耍本产品。
2. 使用本产品时，请将其置于平稳的水平台面上。请勿在倾斜、不稳定的台面上或在地毯、毛巾、塑料、纸等易燃物上操作本产品，并远离台面边缘，以免产品倾倒或发生事故。
3. 本产品仅供家庭使用，请勿作为其它用途。
4. 本产品输入电压/频率为220V-240V/50Hz-60Hz，接通电源前，请检查是否与当地电压相符。高或低于该电压可能会影响产品性能或损坏电器元件，建议使用稳压器，以确保产品正常使用。
5. 本产品仅限于与配套的（包括产品本身配置的和本公司独立出售的）主机、榨汁组件等部件一起使用，请勿使用非配套的部件，以免影响产品性能或发生事故。
6. 使用前请检查主机、集汁盘组件、榨汁网、螺杆组件、料仓组件和旋盖等部件是否完好，如发现损坏，请停止使用并及时与本公司客户服务部门联系。请勿自行拆卸修理，以免影响机器性能或发生事故。
7. 产品使用前、中、后，如发现主机、集汁盘组件、榨汁网、螺杆组件、料仓组件损坏或有明显裂纹，请立即停止使用，以免发生伤害事故。

- 8.如果电源软线损坏，为了避免危险，必须由制造商、其维修部或类似部门的专业人员更换。
- 9.移动本产品时，请一手托住产品底部，一手扶住产品侧身，以免主机脱落发生伤害事故或损坏产品。
- 10.本产品运行速度已设置成理想状态，不需要进行调节。
- 11.在更换部件或接触运动部件前必须关掉开关并断开电源。
- 12.断开电源时，请用手握住插头拔出，请勿拉扯电源线；请勿将电源线碰到尖锐的棱边、尖角等物，以免损坏漏电。
- 13.接通电源前，请确认开关处于关闭状态，并且可拆卸部件已安装到位，以免产品不通电或发生伤害事故。
- 14.产品通电后，严禁移动产品或触碰螺杆组件、电机等可动部件，以免发生伤害事故或损坏产品。
- 15.产品工作时，严禁将眼睛靠近旋盖上的小口，以免发生伤害事故。
- 16.在拆、装、调校或清洗本产品的任何部件之前，请关闭开关、断开电源，以免产品漏电或意外启动。
- 17.本产品建议连续工作10分钟后停机休息。如需继续工作，需冷却15分钟后继续使用，如再次开机使用过程中产品停止工作，此为产品的温控保护，需拔下插头、停机冷却30分钟以上再进行工作。
- 18.榨过某些食材后部件可能染色或发白，属于正常现象，不影响使用。
- 19.加工完毕，关闭开关、断开电源，待电机和螺杆停止转动后，取下可拆卸部件并及时清洗产品，与食品接触部件请用清水进行清洗。在拆卸、清理或清洗可拆卸部件时，请小心操作以免受伤（可佩戴保护手套）。
- 20.请勿将本产品任何部件放入洗碗机、微波炉、消毒柜或超过60℃的热水中清洗或消毒，亦勿使用其他设备加热，以免部件变形或损坏。
- 21.请勿将本产品置于高温、强磁、易燃易爆气体（如天然气、沼气等）等环境中，以免部件工作异常或发生火灾等事故。
- 22.产品必须远离火源30cm以上，以免损坏产品或发生火灾危险。
- 23.无人使用时请关闭开关、断开电源，以免产品发生短路。

24.丢弃本产品 and 产品包装时，请交由有相关资质的部门回收，丢弃时请剪断电源线。

25.食材选用温馨提示：

- 1)榴莲、菠萝蜜、牛油果等水果因蛋白质、脂肪等含量较高，不适合单独榨汁，可与梨子等水分较多的水果搭配榨汁；
- 2)桃、李、杏、梅、芒果、葡萄、柿子等有核、硬籽的食材，橙、柑橘、柚等有厚皮、硬壳的食材，在使用前请将核、硬籽、厚皮去除，以免损坏产品；
- 3)柠檬含有较强的酸性汁液，请与其他果蔬一起榨取，且每次榨取不得超过20g（约3薄片）；
- 4)胡萝卜、西芹、生姜等纤维较多且硬的食材，需切成小块榨汁，以免影响机器使用寿命；在榨汁过程中可手动清理出渣口，提升排渣的顺畅性；
- 5)叶和柄类食材（如小芹菜、甘蓝等）可以切成3~4cm或更短的小段榨汁，由于叶柄类食材纤维较多，可能会缠绕在螺杆组件上。在榨汁过程中可手动清理出渣口，提升排渣的顺畅性；
- 6)鲜榨苹果汁会氧化变色，这是正常现象，可以加几滴柠檬汁减缓氧化过程；
- 7)果肉多且软的食材（如番茄、菠萝、猕猴桃等），出汁量较少，建议与较硬且出汁多的食材（如梨子）一起榨汁，并应先榨较软食材，再榨较硬食材；
- 8)选用新鲜水果和蔬菜，它们含有更多的汁液。
- 9)因食材的季节性与地域性差异，出汁率和口感可能会略有不同。
- 10)本产品不适合榨莲子、豆类、花生、玉米等谷物食材。
- 11)禁止使用本产品榨甘蔗及其他过硬或高纤维食材。

故障分析及排除

故障现象	原因分析	故障排除
通电产品不工作	电源线插头未插到位	将电源线插头插到位
	旋盖或者料仓组件未安装到位	将旋盖和料仓组件安装到位
果汁中含果渣多	榨汁网破损	请送至当地维修点检测
异常震动或噪音大	榨汁网破损	请送至当地维修点检测
	电机损坏	请送至当地维修点检测
主机漏汁	未装好集汁盘组件的硅胶塞块	将硅胶塞块安装到位
料仓组件无法安装到位	螺杆组件未安装到位	根据前页操作指引将螺杆组件安装到位
食材卡在料仓组件内	食材过大	将食材切块后放入料仓组件
长纤维食材缠绕在螺杆组件上	食材纤维较长,无法被切断	将食材切为3~4cm或更短的小段后放入
使用过程中停机	长时间使用,电机温控保护导致停机	拔下插头、停机冷却30分钟以上再进行工作
	投入食材过多或太硬,过载堵转保护导致停机	减少食材投入量,勿投入过硬食材

- 如问题不能解决,切勿私自拆卸机器。请送当地售后服务部进行维修。
- 以上内容如因型号或零部件变更与实物不符,请以实物为准,恕不另行通知,敬请谅解!

菜谱	食材	做法
西瓜柠檬汁	西瓜 约1/6个 400g 柠檬 约1/6个 10g 薄荷叶 2片 20g	1.将西瓜和柠檬去皮后切块,薄荷叶洗净备用; 2.将机器安装好,旋转旋钮至“开”,从投料口先放入柠檬块和薄荷叶,再放入西瓜块; 3.榨汁结束后,旋转旋钮至“关”,将果汁倒入杯中即可享用。
胡萝卜苹果番茄汁	苹果 约1个 200g 小番茄 约5个 100g 胡萝卜 约1/4个 50g	1.将苹果去皮、去核后切块,胡萝卜去皮后切块,小番茄洗净后去蒂备用; 2.将机器安装好,旋转旋钮至“开”,从投料口先放入小番茄榨汁,再放入苹果块和胡萝卜块榨汁; 3.榨汁结束后,旋转旋钮至“关”,将果汁倒入杯中即可享用。
醇豆浆	黄豆 50g 水 450g	1.将黄豆提前浸泡6-8小时,洗净备用; 2.将机器安装好,旋转旋钮至“开”,将洗净的黄豆和水交替缓慢放入; 3.榨汁结束后,旋转旋钮至“关”,结束工作; 4.将榨好的豆浆倒入锅中熬煮,直至沸腾后,边搅拌边熬煮,再煮10分钟即可。
柚桃茉莉花果茶	柚子 约1/2个 300g 桃子 约1个 300g 纯净水 100g 茉莉花茶茶叶 4g	1.将柚子果肉剥出,桃子去皮、去核后切块,在杯中加入茉莉花茶茶叶和纯净水,浸泡10分钟备用; 2.将机器安装好,旋转旋钮至“开”,从投料口先放入柚子果肉榨汁,再放入桃子块榨汁; 3.榨汁结束后,旋转旋钮至“关”,将果汁倒入杯中,加入浸泡好的茶水,搅拌均匀即可享用。

菜谱	食材	做法
猕猴桃羽衣甘蓝汁	苹果 约1个 200g 猕猴桃 约1个 100g 羽衣甘蓝 约1片 10g	1.将苹果去皮、去核后切块,羽衣甘蓝洗净后切段,猕猴桃去皮后切块备用; 2.将机器安装好,旋转旋钮至“开”,从投料口先放入羽衣甘蓝段和猕猴桃块榨汁,再放入苹果块榨汁; 3.榨汁结束后,旋转旋钮至“关”,将果汁倒入杯中即可享用。
芒果冰淇淋	冻芒果块 500g	1.将芒果去皮、去核后切块,放入冰箱冷冻,制作前取出解冻10分钟备用; 2.将机器安装好,旋转旋钮至“开”,从投料口放入冻芒果块,从接渣口挤出; 3.制作结束后,旋转旋钮至“关”,即可享用。
香蕉酸奶冰淇淋	冻酸奶块 200克 冻香蕉 300克	1.将香蕉去皮,切段,放入冰箱冷冻,制作前取出解冻10分钟备用; 2.将机器安装好,旋转旋钮至“开”,从投料口放入冻芒果块,从接渣口挤出; 3.制作结束后,旋转旋钮至“关”,即可享用。

注意:原汁机常用食谱仍为果汁,食谱中包含冰冻水果和酸性食材尤其是柠檬,基于对产品寿命考虑,不推荐作为长期食谱使用。

保修条款

1. 保修期限：

本产品自购买之日起享有两年制造商保修，需提供有效的购买凭证、原始收据或发票。如交货日期晚于购买日期，则以交货日期为准。

2. 保修范围：

若产品在保修期内出现制造缺陷，用户可联系九阳马来西亚售后服务团队或授权经销商/零售商。经确认缺陷后，用户可申请免费保修维修服务。

注意：包装材料如外箱、内部泡沫、纸卡、用户手册及其他消耗品不在保修范围内。

3. 保修除外条款：

以下情况不在保修范围内：

- 正常使用造成的磨损。
- 产品用于商业用途。
- 由非授权服务中心更改或更换的零部件。
- 因不当使用、第三方操作或其他外部原因造成的损坏。
- 附件或消耗品不享有保修。

4. 保修期内的付费维修服务：

如果出现以下情况，即便在保修期内，用户仍需自费维修：

- 从非授权经销商或卖家处购买的产品。
- 产品不符合马来西亚产品标准，包括电压及适配器兼容性差异。
- 因不当使用、维护及存储导致的损坏。
- 保修期届满后发现的缺陷。
- 因未经授权的拆卸造成的损坏。
- 因自然灾害、事故或不可抗力（如天灾、洪水、事故、政府命令）造成的损坏。
- 因误用或滥用（如操作不当、液体渗入、使用不当电压或运输损坏）导致的故障或损坏。

5. 非保修维修费用：

- 九阳马来西亚服务团队在收到客户寄回的有缺陷产品后，会对产品进行检查，以

确定是否属于保修范围。

- 若检测结果显示损坏原因是用户误用或不在保修范围内，用户需承担维修费用、零部件费用及单程运费（若选择维修服务）。
- 如用户选择取消非保修产品的维修服务，需承担往返运输费用。

注意： SC Alliances (M) Sdn Bhd 保留拒绝任何因商业或半商业用途使用、或产品不符合马来西亚产品标准（包括电压和适配器兼容性差异）的保修申请的权利。

联系我们：

- 1.一般咨询：请联系客户服务团队：+6010-8801010。
- 2.在线咨询： Joyoung Malaysia（Shopee/Lazada）
- 3.技术咨询：请联系服务中心：03-8026 6226（Highpoint Service Network Sdn Bhd）

营业时间：周一至周五，上午9点至下午6点

公共假期休息